
TEL: (778) 242 - 8833 ADDRESS: #201 - 5327 192 St. SURREY, B.C. V3S 8E5

SYNTHETIC GRASS CONCRETE/ ASPHALT/ TORCH ON ROOF INSTALLATION

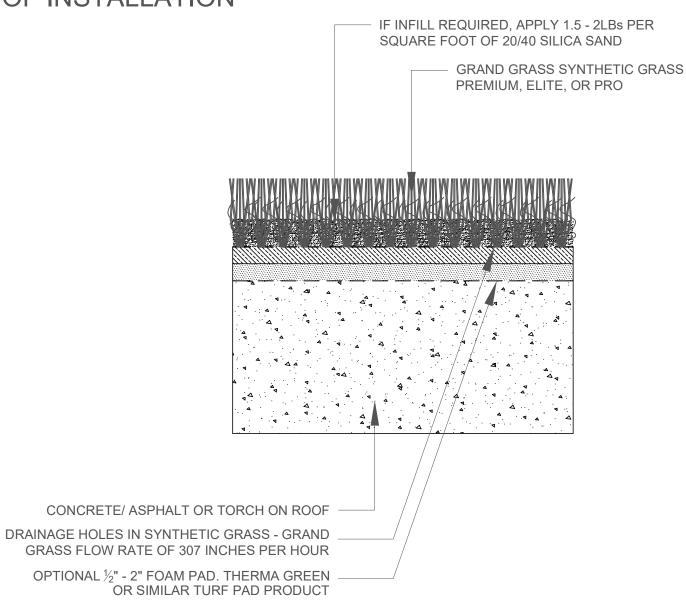



GENERAL NOTES:

- IF INSTALLING ONTOP OF PAVING STONES, USE $\frac{1}{2}$ " 2" FOAM TO AVOID CREASING
- ALL SYNTHETIC GRASS FIBERS TO BE FACING THE SAME DIRECTION
- WHEN SEAMING TWO PIECES OF GRASS TOGETHER, ENSURE SYNTHETIC GRASS GLUE AND SEAM TAPE ARE USED. ENSURE FIRST FOUR STITCHES ARE CUT OUT FROM EACH SIDE WHEN SEAMING TWO PIECES TOGETHER IN A PARALLEL SEAM
- USING PL PREMIUM, GLUE PERIMETER (EDGES AND CORNERS) OF THE SYNTHETIC GRASS TO BE LAID. APPLY GLUE EVENLY
- IF NO INFILL IS TO BE USED, GLUE ENTIRE AREA WHERE SYNTHETIC GRASS IS TO BE INSTALLED USING PL PREMIUM. APPLY GLUE IN A "S" SHAPE
- INFILL 20/40 SILICA SAND ONTO TOP OF GRASS, USE BLOWER AND POWER BROOM TO PUSH THAT SAND TO THE BOTTOM LAYER OF GRASS. ENSURE 1.5LBs 2LBs OF 20/40 SILICA SAND IS APPLIED EVENLY